



Unit: mm

Effective length	Total length	Mounting pitch				Number of intermediate foot plates
		L2	L3	L4	L5	
L	L1	L2	L3	L4	L5	n
70	208	185	-	-	-	0
120	258	235	-	-	-	0
170	308	285	-	-	-	0
220	358	335	-	-	-	0
270	408	385	-	-	-	0
320	458	435	-	-	-	0
370	508	485	-	-	-	0
420	558	535	-	-	-	0
470	608	585	-	-	-	0
520	658	635	-	-	-	0
570	708	685	-	-	-	0
620	758	735	-	-	-	0
670	808	785	392.5	-	392.5	1
720	858	835	417.5	-	417.5	1

Effective length	Total length	Mounting pitch				Number of intermediate foot plates
		L2	L3	L4	L5	
L	L1	L2	L3	L4	L5	n
770	908	885	442.5	-	442.5	1
820	958	935	467.5	-	467.5	1
920	1,058	1,035	517.5	-	517.5	1
1,020	1,158	1,135	567.5	-	567.5	1
1,140	1,278	1,255	627.5	-	627.5	1
1,240	1,378	1,355	677.5	-	677.5	1
1,340	1,478	1,455	727.5	-	727.5	1
1,440	1,578	1,555	520	520	515	2
1,540	1,678	1,655	550	550	555	2
1,640	1,778	1,755	585	585	585	2
1,740	1,878	1,855	620	620	615	2
1,840	1,978	1,955	650	650	655	2
2,040	2,178	2,155	720	720	715	2

Unit: mm

MG: Machine guide * Intermediate foot plate: One location when L ≥ 670 mm, two locations when L ≥ 1440 mm

Notes

- The surface indicated by the ▲ marks is the installation surface.
- Screws indicated in the diagram are supplied as standard accessories.
- Movement outside the effective length (L) will damage the scale head. It is recommended that the mechanical movable length (stroke) be set to 10 mm or more to the inside of both ends of the effective length (L).